


# HDANYWHERE

## WHERE IS MY USER MANUAL?

The user manual for your mHub™ system is located online to ensure that it is always kept up-to-date. To access the manual please visit [www.HDanywhere.com/mhub4k44/](http://www.HDanywhere.com/mhub4k44/)

## IN THE BOX:

MHUB 4K (4X4) HUB X1

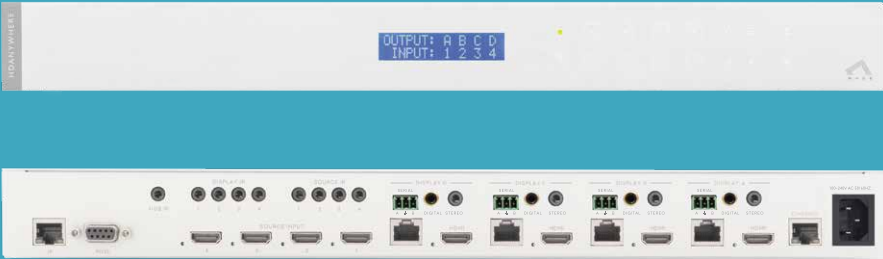

DISPLAY RECEIVERS X4



REMOTE CONTROL X1



## SETTING UP IR:

Included in the box is x6 IR receivers and x5 transmitters. To make sure that your mHub's IR system works correctly make sure that:



19" RACK MOUNTING EARS X2

### IR RECEIVERS (RX) X6

Are connected to each Display Receiver. Optional IR receivers can be used in the "Hub Ext" port and "All" display port. The "Hub Ext" port sends IR commands to your mHub to control it. The "ALL" port sends any IR command to all display location if using forwards IR functionality (sold separately).



RECEIVER MOUNTING EARS X8

### IR TRANSMITTERS (TX) X5

These connect to your mHub and send IR commands to your source devices. An additional 5th IR transmitter can be used for the "AVR" port and will carry out global IR functions at your mhub location.



48V | 2.5A DC PSU X1

IR RECEIVERS (RX) X6

IR TRANSMITTERS (TX) X5

## NEED MORE HELP?

[WWW.HDANYWHERE.COM/MHUB4K44](http://WWW.HDANYWHERE.COM/MHUB4K44)  
[SUPPORT@HDCONNECTIVITY.COM](mailto:SUPPORT@HDCONNECTIVITY.COM)