


SANUS[®]

A brand of **legrand**

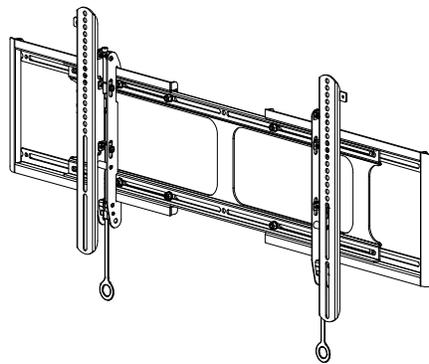

VXL7-B2

FIXED
PREMIUM TV WALL MOUNT

INSTRUCTION MANUAL

Texto en español, página 24

Svensk text sida 40

Texte français page 28

中文文字说明请参见第 44 页

Deutscher Text Seiten 32

日本語は 48 ページ

Nederlandse tekst op pagina 36

**GET IT
RIGHT**
THE FIRST TIME

Follow this step-by-step
instruction manual to
speed up your installation.

WE'RE HERE TO HELP



Want to watch a video that shows how easy this DIY project will be?



Watch it now at:
SANUS.com/3283



Get it right the first time. HeightFinder™ shows you where to drill.



Check it out at:
SANUS.com/2567



Our install experts are standing by to help.




Call us at:
US: +1 (800) 359-5520
EMEA: +31 (0) 495 580 852
UK: +44 (0) 800 056 2853

Before you begin

Remove the stand

from your TV — if attached.

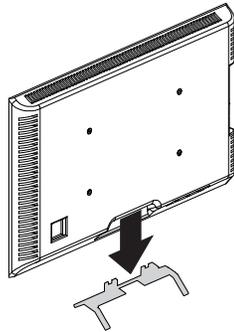

Your TV product sticker may be inaccessible after mounting


BEFORE MOUNTING YOUR TV:



Record your TV information and save for future reference.




Or, take a photo of your TV product sticker and save for future reference.

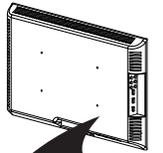

Brand:	_____
Model No.:	_____
Serial No. (S/N):	_____
Version/SCC/Other:	_____


Install any accessories

you may have purchased — if they require the TV to be removed from the wall for assembly. The TV is removable for future accessory purchases.

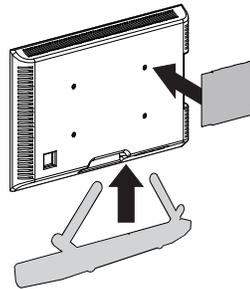

Protect the face

of your TV when laying it down for installation.

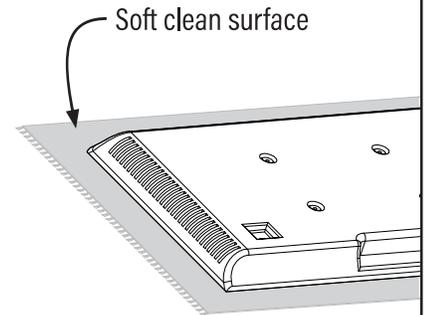

IMPORTANT SAFETY INSTRUCTIONS – PLEASE READ MANUAL PRIOR TO USE – SAVE THESE INSTRUCTIONS

Please read through these instructions completely to be sure you're comfortable with this easy install process.

Check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service: +1 (800) 359-5520 (EMEA: +31 (0) 495 580 852; UK: +44 (0) 800 056 2853)

⚠ CAUTION: Avoid potential personal injuries and property damage!

- This product is designed ONLY to be installed into wood studs, solid concrete or concrete block.
– **DO NOT INSTALL INTO DRYWALL ALONE – DRYWALL ALONE WILL NOT HOLD THE WEIGHT OF YOUR TV.**
- This product is designed for **INDOOR USE ONLY.**
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

**TV Weight Limit
(including accessories)**

DO NOT EXCEED



If your TV (including accessories) exceeds this weight, this mount is NOT compatible.

Visit SANUS.com or call customer service to find a compatible mount.

Wall Construction

ONLY install on these acceptable wall types.




Unsure

Call Customer Service


CAUTION:

DO NOT install in drywall alone

Drywall alone will NOT hold the weight of your TV.

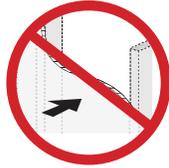


wood studs

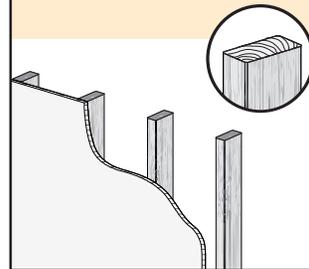

ACCEPTABLE

Solid concrete or concrete block

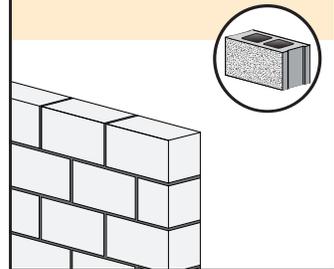

ACCEPTABLE

 
Tools Needed



Tape Measure



Pencil



Level



Tape



Screwdriver



Electric Drill



1/2 in. (13 mm) Socket Wrench

Wood Stud Install



Stud Finder



Awl



7/32 in. (5.5 mm) Wood Drill Bit

Concrete Install



3/8 in. (10 mm) Concrete Drill Bit



Hammer

STEP 1

Attach TV Bracket to TV


WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

NOTE: Not all hardware included will be used.


STEP 1 Parts and Hardware

01 **TV Screws**
[Only one size fits your TV]
(qty. 4 each)

M6

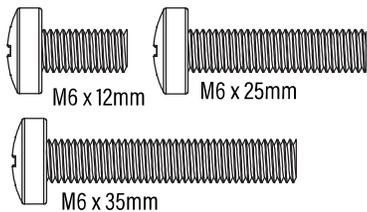

M8

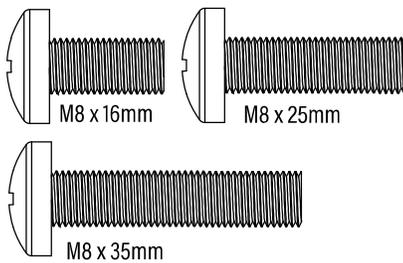


Washer
(qty. 4 each)

02




Spacers
[If necessary]
(qty. 4 each)


03

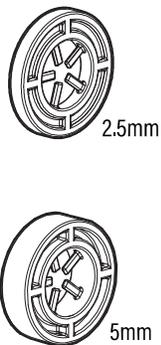

TV Brackets

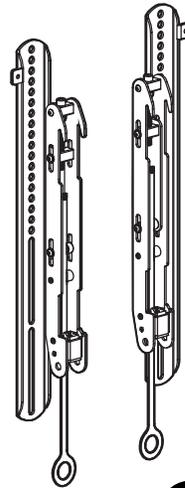

TV Bracket Extension

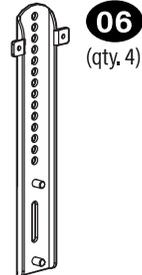

Washer





Nut



1.1 TV Screw Diameter


Only one screw size **01** fits your TV.

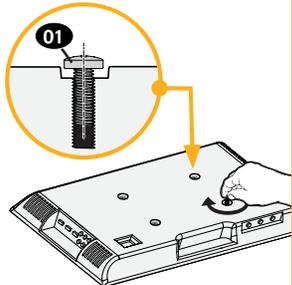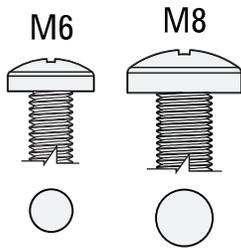


1.2 Determine TV Screw Length and Spacers



CAUTION

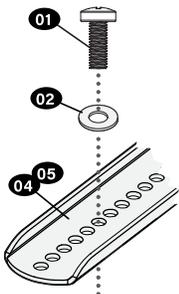

MINIMUM Three (3) Full Turns of Thread Engagement

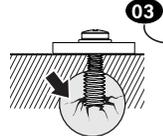


If Screws **01 Hit the Bottom of Your TV, Use Spacers **03****

03 IF NEEDED

2.5mm 5mm 7.5mm




If Your TV Included Spacers or Adapters, Use Them UNDER the Mount Hardware.

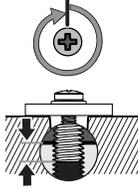

Flat Back TV


[TV brackets lay flat on your TV]

NO SPACER **03 NEEDED**

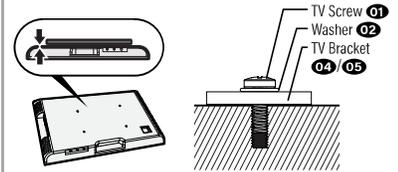

Flat Back TV with deep inset holes or cable interference


SPACER(S) **03 NEEDED**

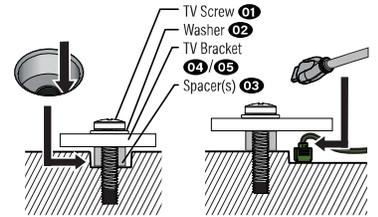

Rounded or Irregular Back TV

[TV brackets NOT sitting flat on your TV]

SPACER(S) **03 NEEDED**

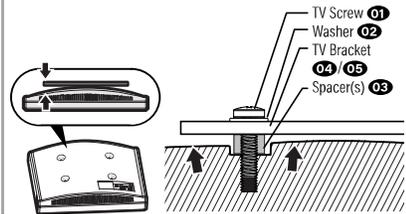


1.3 Determine Your TV Bracket Configuration

Measure the HEIGHT of your TV mounting hole pattern.

**For Height
400 mm or less**


**Skip to STEP 1.4
on PAGE 9**

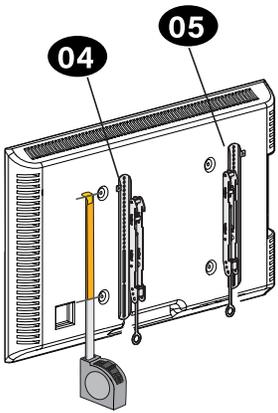


≤ 400 mm (15 ¾ in.)

**For height
greater than 400 mm**

Assemble TV bracket
extensions **06** to fit over your
TV VESA height.

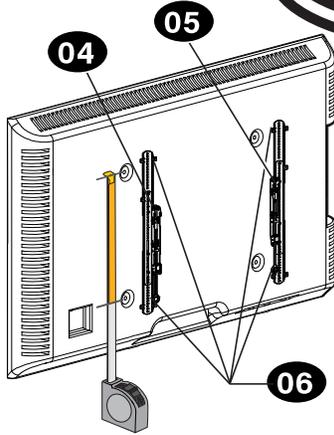





> 400 mm (15 ¾ in.)

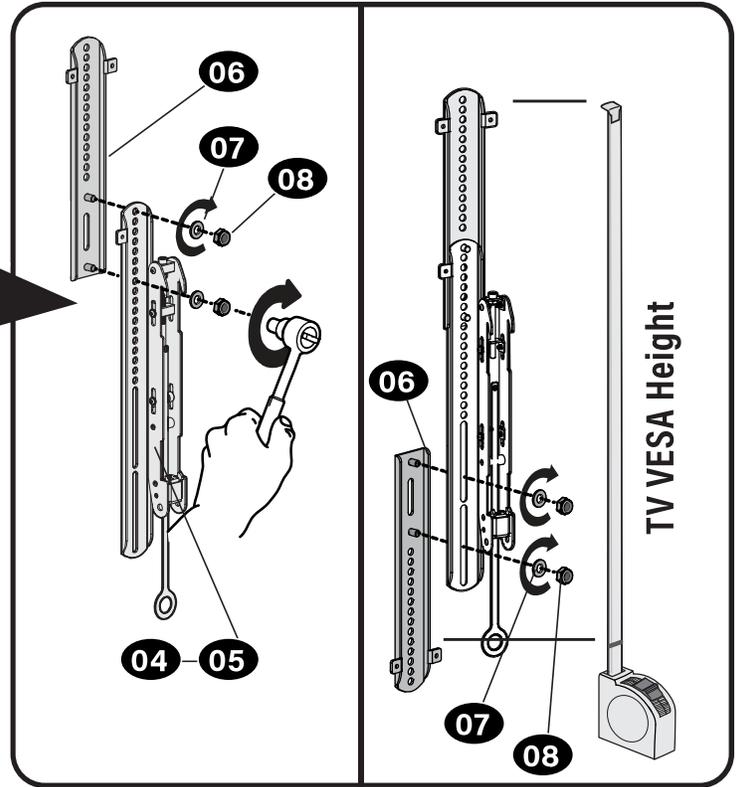

TV VESA Height

1.4 Attach TV Brackets to Your TV

Center the TV brackets **04** and **05** on your TV hole pattern, and install using your screw/washer/spacer.

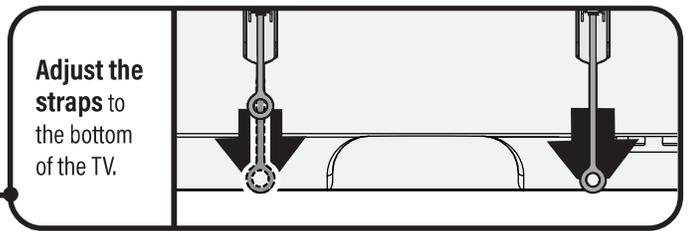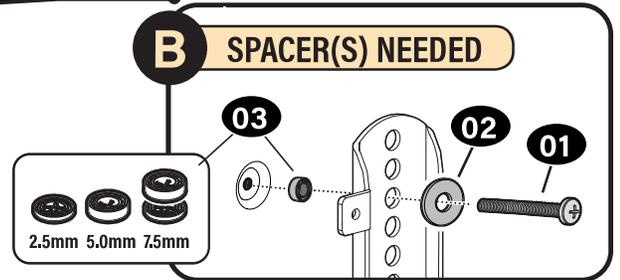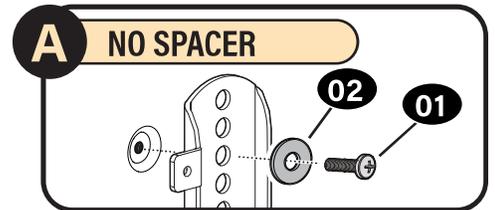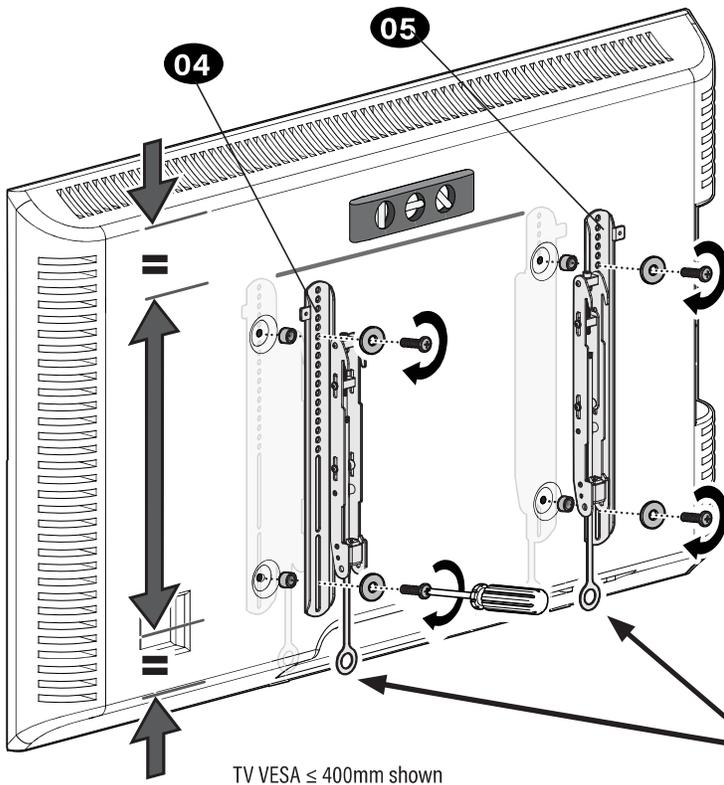

STEP 2

Attach Wall Plate to Wall


WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

NOTE: Not all hardware included will be used.

Parts and Hardware for STEP 2



Wall Plate Template

09
(qty. 1)

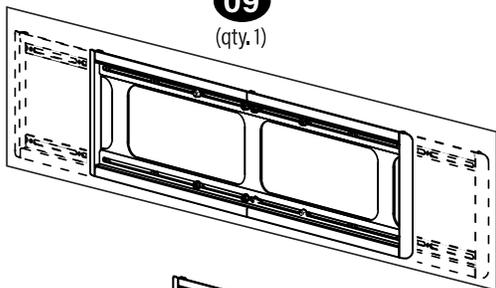

Wall Plate

10
(qty. 1)

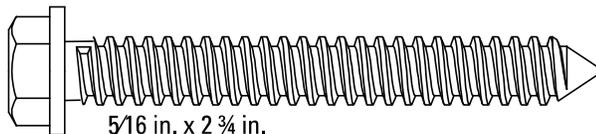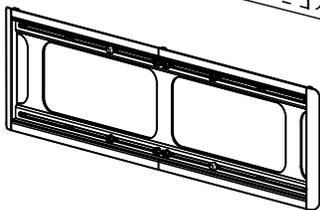

5/16 in. x 2 3/4 in.

Lag Bolt

11
(qty. 8)

For concrete installations ONLY


Concrete Anchor

12
(qty. 8)



UX10 x 60R

Tool for Adjustments

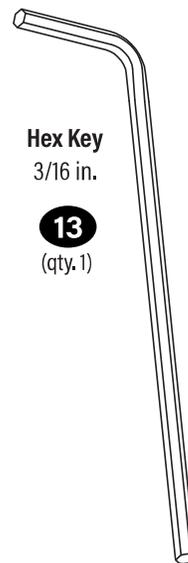

Hex Key
3/16 in.

13
(qty. 1)


Determine Your Wall Plate Configuration

Measure the distance between your TV brackets **04** / **05**.

For TV brackets 700mm or less *

Skip to STEP:
2A (wood Stud) on PAGE 12
or **2B (concrete)** on PAGE 15


≤ 700mm (27 ½ in.)

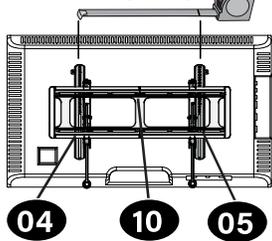

For TV brackets greater than 700mm


Extend the wall plate to fit
the TV brackets.

> 700mm (27 ½ in.)

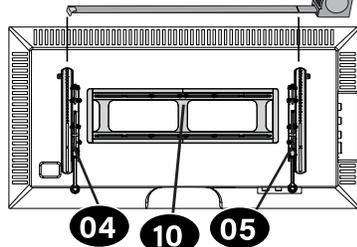


Extend your wall plate **10** beyond your TV brackets **04** / **05**,
but not past your TV edges.


WARNING: Avoid potential personal injuries!
These areas could be pinch points when sliding back together.

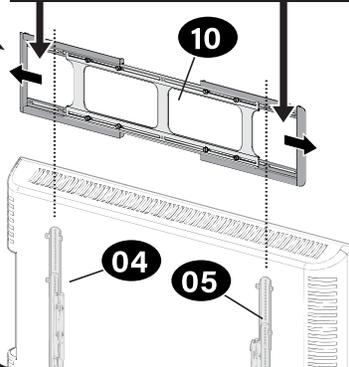


NOTE:
If needed, loosen
the nuts shown to
help slide open.

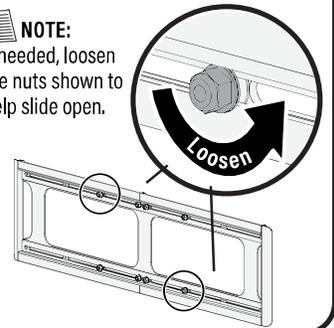

* **NOTE:** For Wood Stud Installations ONLY: You can extend the wall plate
10 to allow your TV to shift side-to-side. Be sure to not extend the wall plate
past your TV edge.

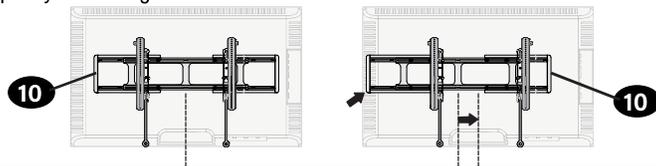




 
STEP 2A





Wood Stud Installation

CAUTION: Avoid potential personal injury or property damage!

- Drywall covering the wall must not exceed 5/8 in. (1.5 cm)
- Minimum wood stud size: common 2 x 4 in. (5.1 x 10.2 cm) nominal 1 1/2 x 3 1/2 in. (3.8 x 8.9 cm)
- Minimum horizontal space between fasteners: 16 in. (40.6 cm)
- Stud centers must be verified

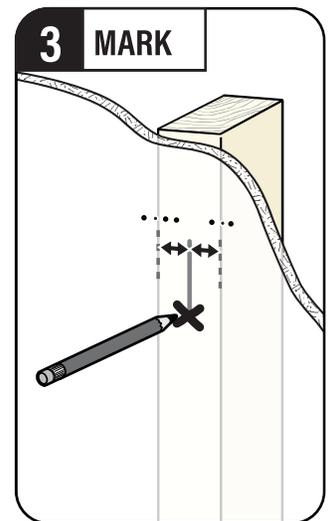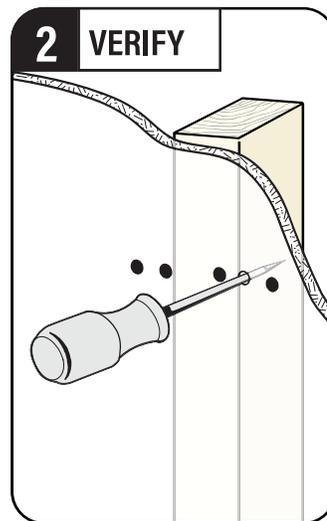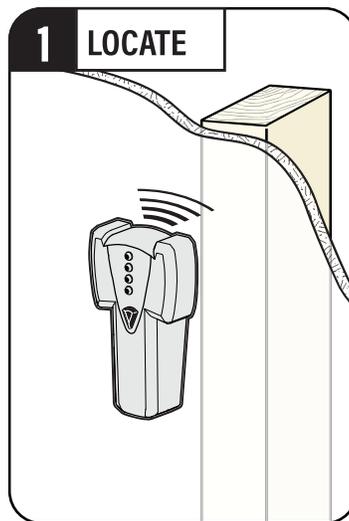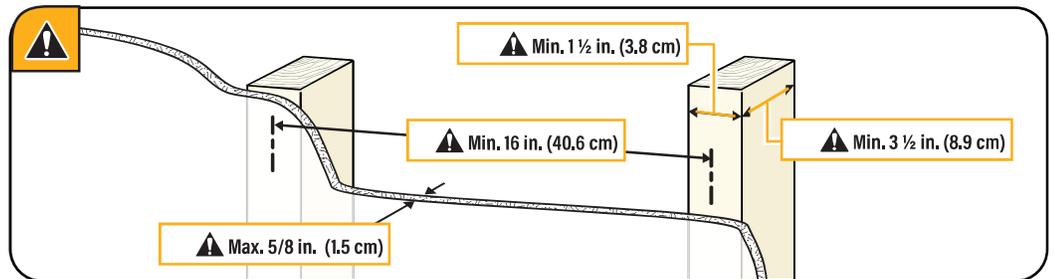

4 POSITION TEMPLATE

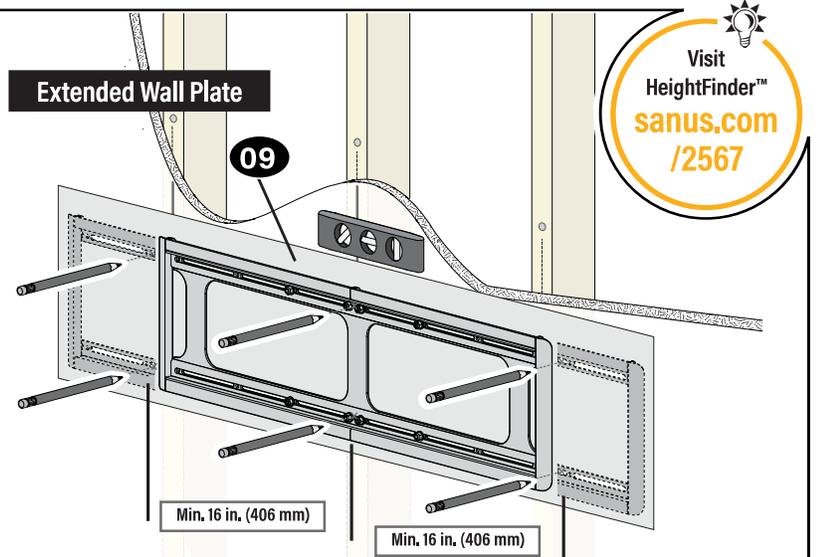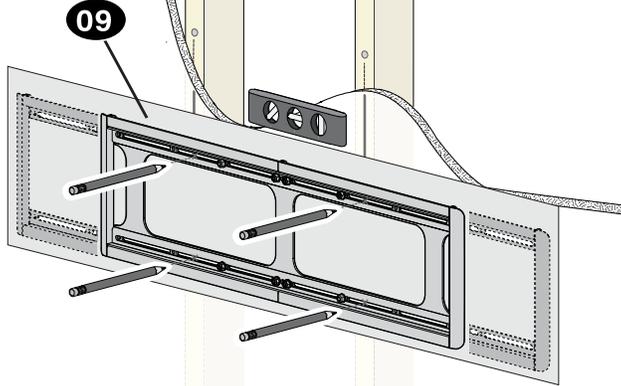

⚠ CAUTION: Avoid potential personal injuries and property damage!



FOR EXTENDED WALL PLATES:

You **MUST** install 2 lag bolts **11** into the center (top and bottom) of wall plate **10**, then a minimum of 16 in. (406 mm) out from center, for a minimum of 6 lag bolts total.

💡 TIP: To calculate your precise wall plate **10** location, check out our HeightFinder at sanus.com [www.sanus.com/2567].

STEP 2A

(continued)

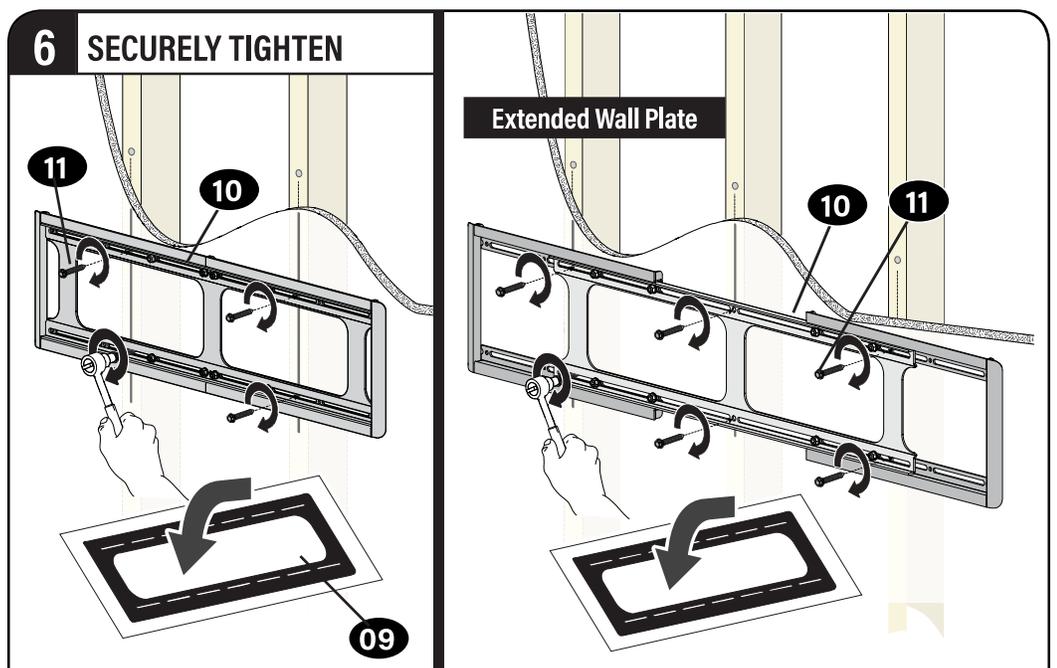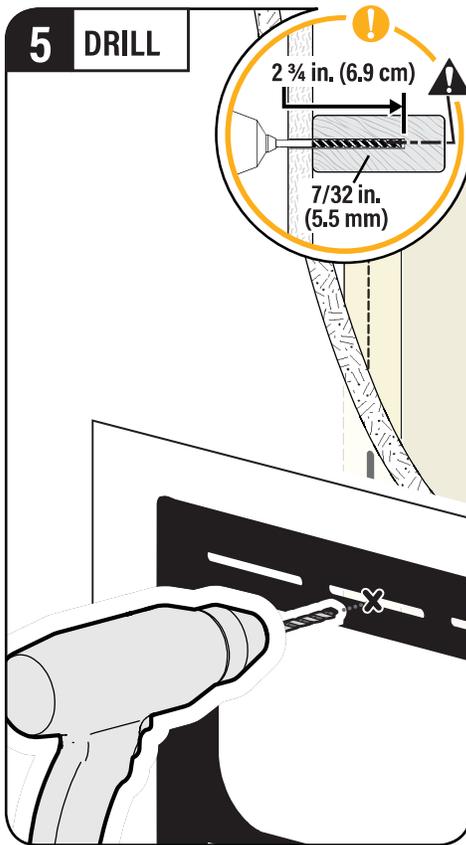

⚠ CAUTION: Avoid potential personal injury or property damage!

All lag bolts **11** MUST BE firmly tightened to prevent unwanted movement of the wall plate **10**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

Go to STEP 3 on PAGE 18.

STEP 2B




Solid Concrete or Concrete Block Installation

CAUTION:

Avoid potential personal injury or property damage!

- Mount the wall plate **10** directly onto the concrete surface (no surface covering)
- Minimum **solid concrete** thickness: 8 in. (20.3 cm)
- Minimum **concrete block** size: 8 x 8 x 16 in. (20.3 x 20.3 x 40.6 cm)
- Minimum horizontal space between fasteners: 16 in. (40.6 cm)
- **For concrete applications**, TV brackets **04** and **05** must remain centered in wall plate **10**. Keep this in mind when selecting the wall plate location

1 POSITION TEMPLATE

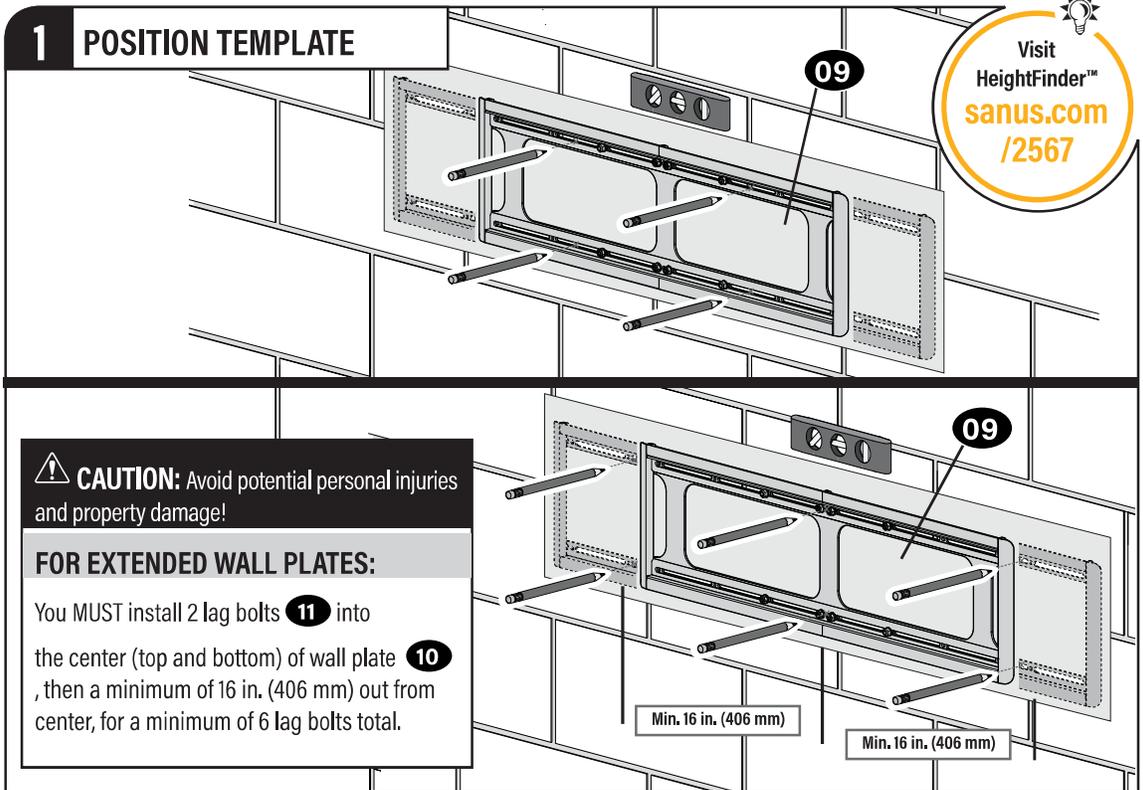

CAUTION: Avoid potential personal injuries and property damage!

FOR EXTENDED WALL PLATES:

You **MUST** install 2 lag bolts **11** into the center (top and bottom) of wall plate **10**, then a minimum of 16 in. (406 mm) out from center, for a minimum of 6 lag bolts total.





TIP:


To calculate your precise wall plate **10** location, check out our HeightFinder at sanus.com [www.sanus.com/2567].

STEP 2B

(continued)

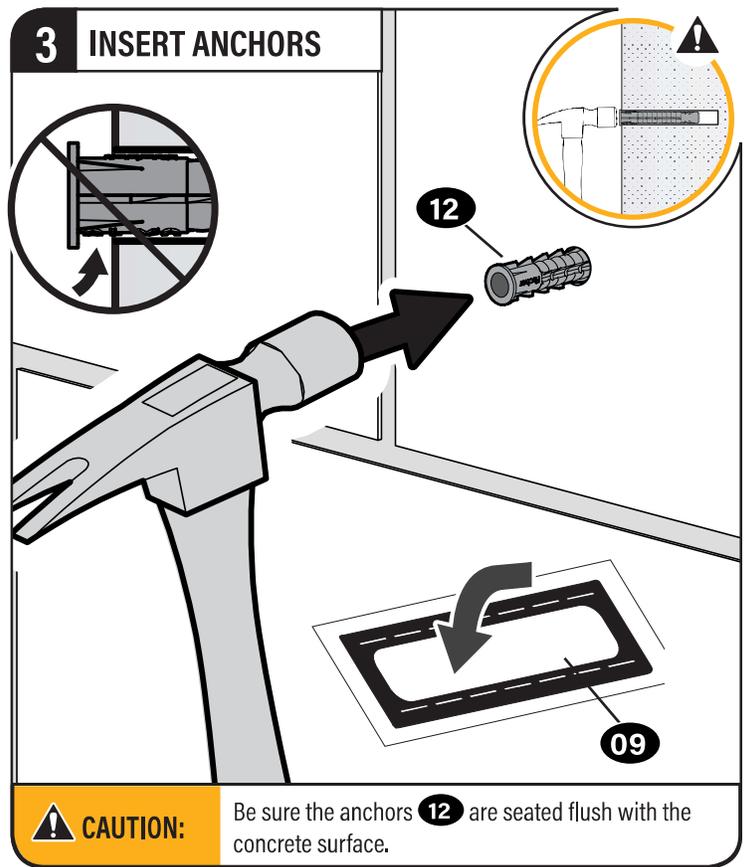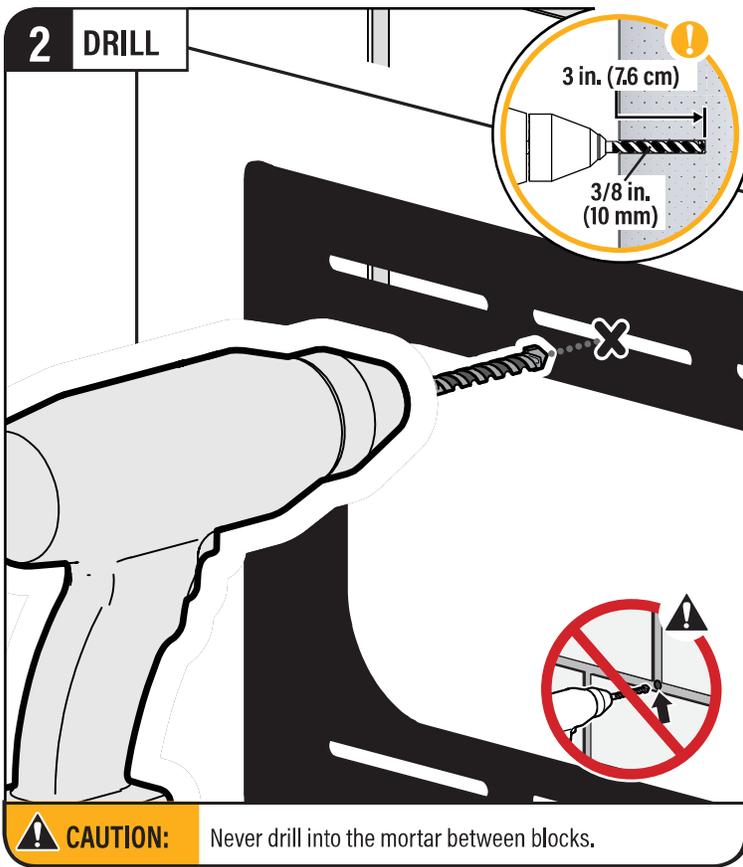

4 SECURELY TIGHTEN

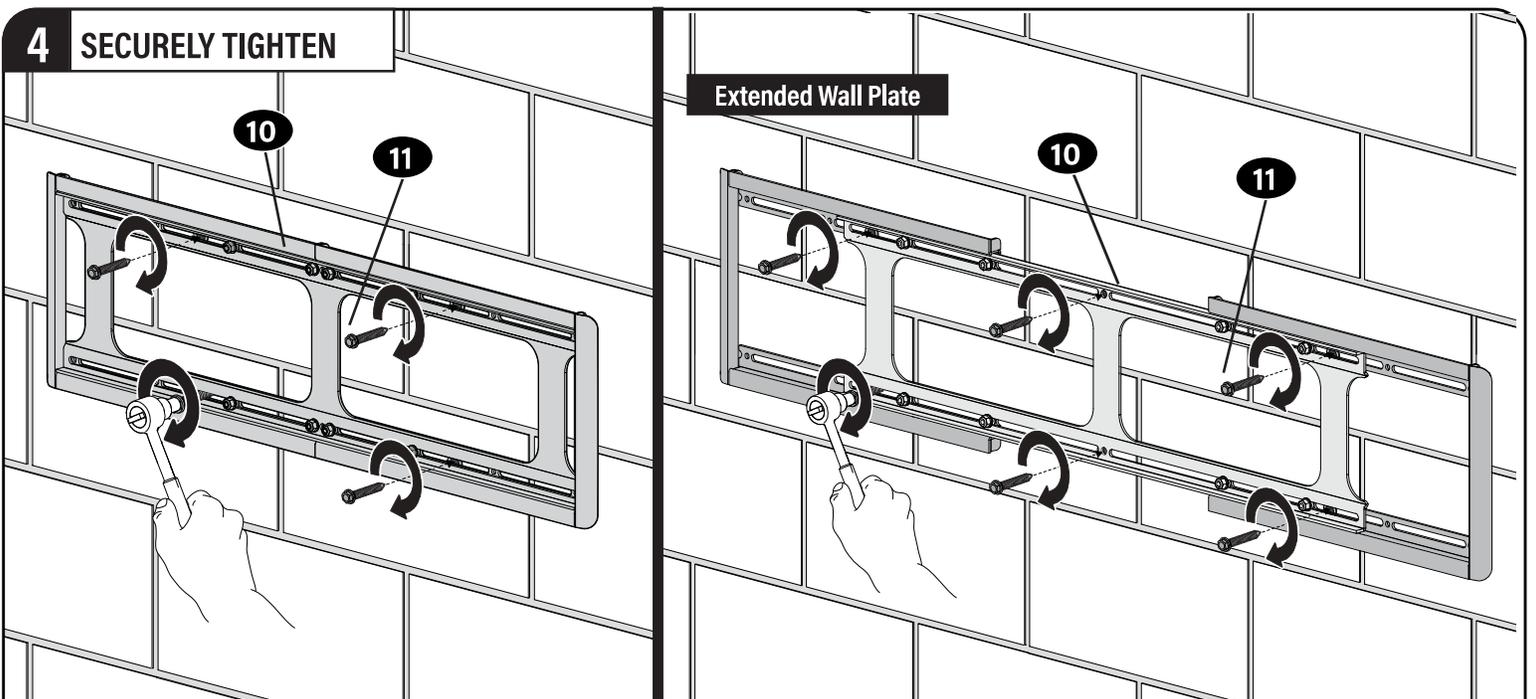

⚠ CAUTION: Avoid potential personal injury or property damage!

All lag bolts **11** MUST BE firmly tightened to prevent unwanted movement of the wall plate **10**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

STEP 3

Attach TV to Wall Plate

⚠ CAUTION:


Avoid potential personal injury or property damage!

For **CONCRETE APPLICATIONS:**

TV brackets **04** and **05** MUST remain centered in wall plate **10**.

For extended wall plates:



TV brackets **04** and **05** must only hang on the **OUTER** sections of wall plate **10**.

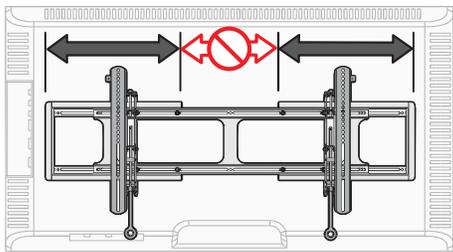


1 HANG



HEAVY! You may need assistance with this step.

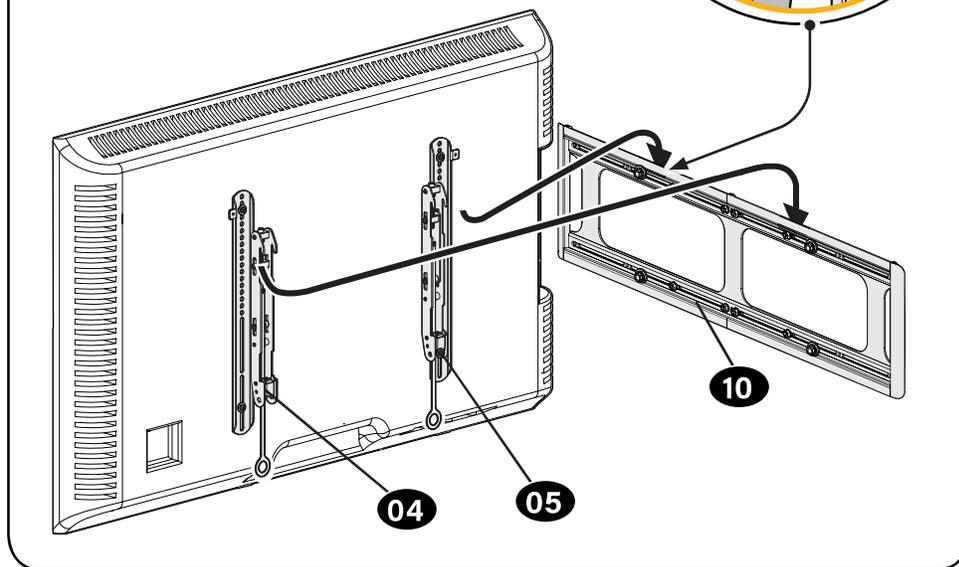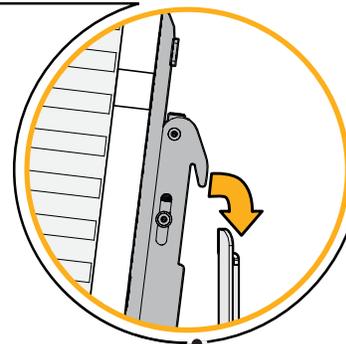


2 ATTACH

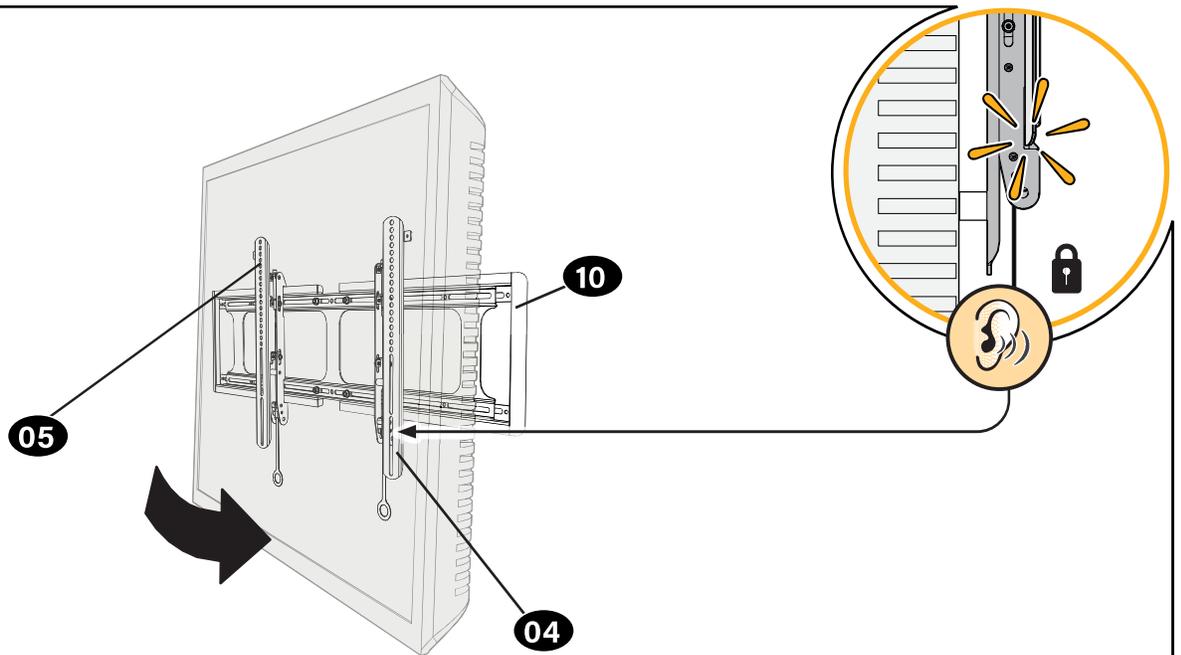

⚠ CAUTION: Avoid potential personal injury or property damage!


Always make sure TV brackets **04** and **05** are in the locked position so the TV is securely fastened to the wall plate **10**.

 Adjustments




LEVEL


To level your TV, turn the level adjustment screw **(S)** on the top of either TV bracket **04** and **05** to raise or lower that respective side of the TV.

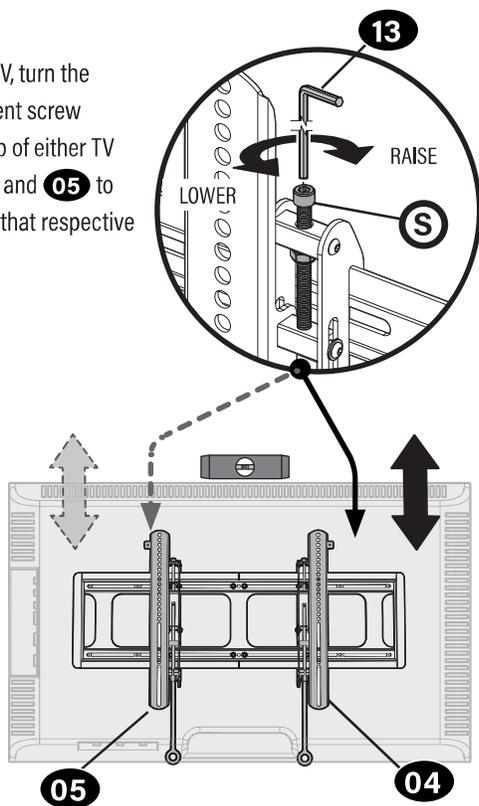

HEIGHT

 Adjust the height by turning the level adjustment screw **(S)** on the top of both TV brackets **04** and **05**.

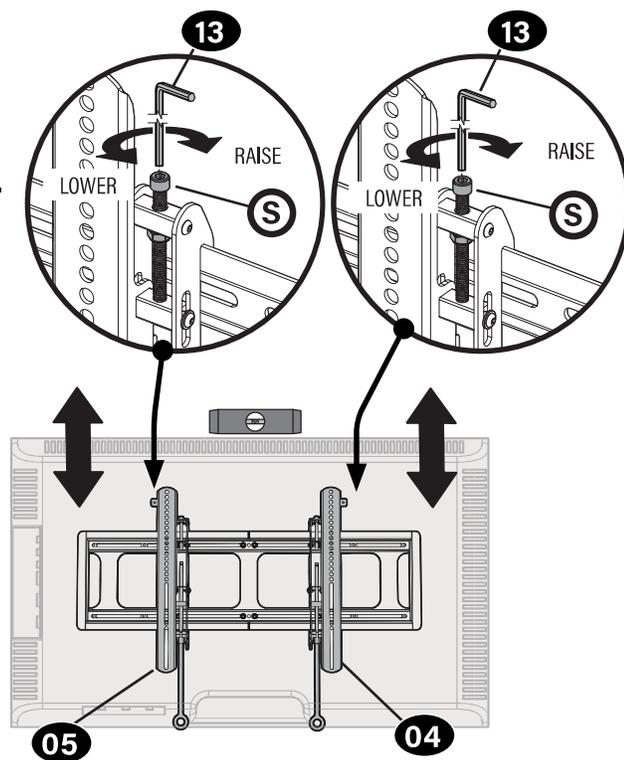



TV LATERAL SHIFT




CAUTION: Avoid potential personal injury or property damage!

For **CONCRETE APPLICATIONS**: TV brackets **04** and **05** MUST remain centered in wall plate **10**.

CAUTION: Avoid potential personal injury or property damage!

Slowly slide the TV along the wall plate to reposition. The wall plate has built-in stops to limit lateral movement.

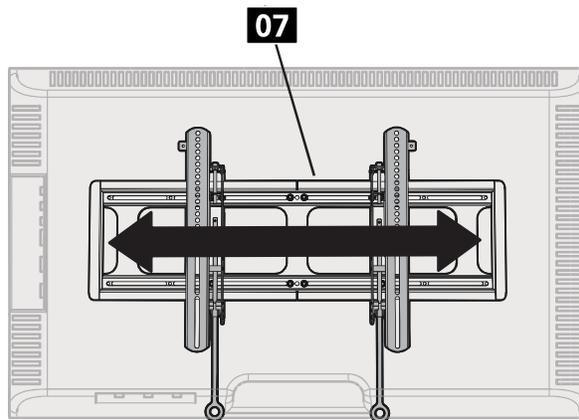






REMOVING THE TV



⚠ CAUTION: Avoid potential personal injury or property damage!


To prevent breaking the locking latch: always pull and hold release tabs **(R)** down while pulling the TV away from the wall.

📄 NOTE: To rehang the TV, follow the procedures in STEP 3 on PAGE 18.

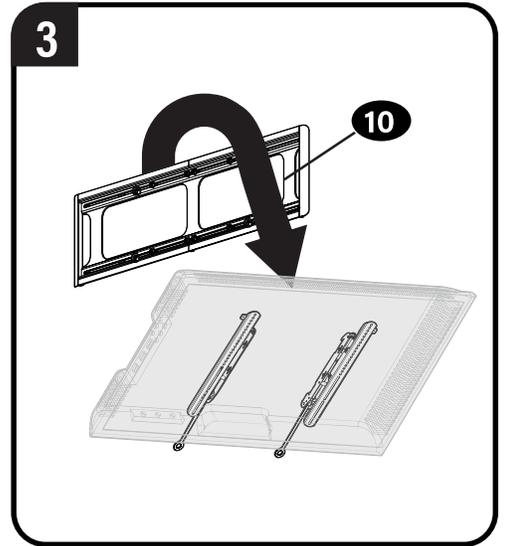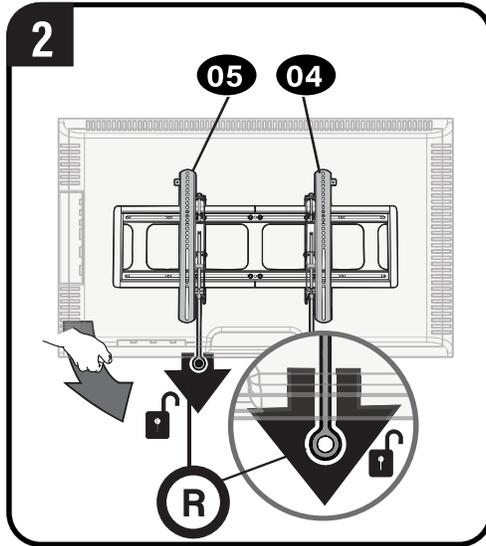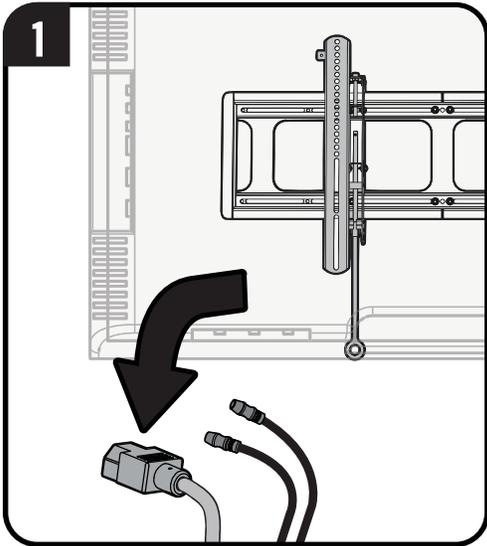


Dimensions


TV INTERFACE

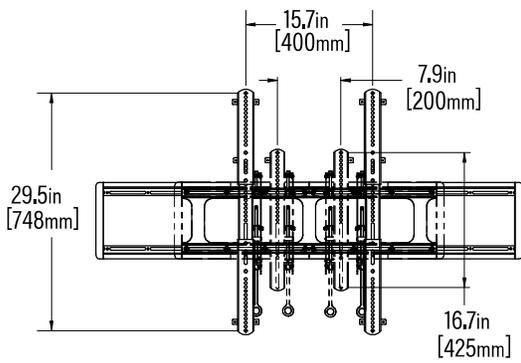


TOP VIEW - TV MOUNTED

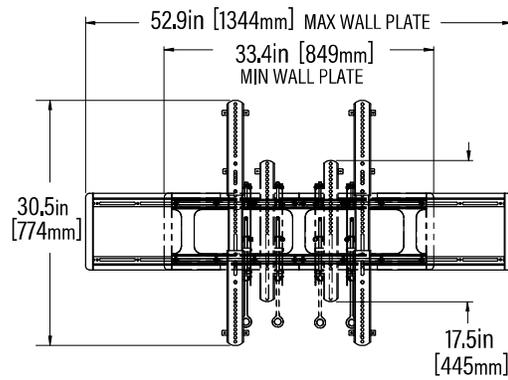


TOP VIEW

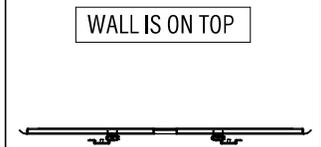

WALL PLATE

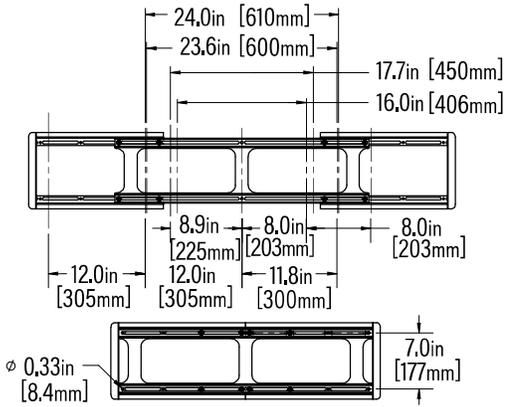

FULLY ASSEMBLED MOUNT

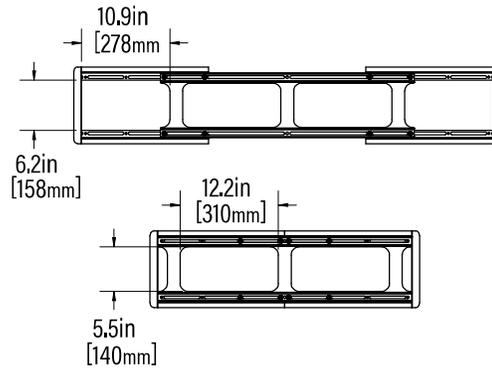

SIDE VIEW

