

Rear Speaker



Reference Guide	EN
Guide de référence	FR
Guía de referencia	ES

https://rd1.sony.net/help/ht/208587/h_zz/

BRAVIA Theatre Rear 8

Model: YY2087C

©2025 Sony Corporation
Printed in China
<https://www.sony.net/>



* 5 0 6 4 5 6 6 2 1 * (1)

English

Rear Speaker

Before using the unit, be sure to access the following URL and read the End User License Agreement (EULA).
https://rd1.sony.net/help/vs/el22/h_zz/

Model: YY2087C

The term "product" in this document refers to the unit or its accessories.

For customers in Europe

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are attached in the following locations:
• the bottom of the unit

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

The validity of the CE marking is restricted to only those countries/regions where it is legally enforced, mainly in the EEA (European Economic Area) countries/regions and Switzerland.

The validity of the UKCA marking is restricted to only those countries/regions where it is legally enforced, mainly in the UK.

Notice for customers: the following information is only applicable to products sold in countries/regions applying EU directives or/and UK applying relevant statutory requirements.

This product has been manufactured by or on behalf of Sony Corporation.

EU and UK importer: Sony Europe B.V.

Inquiries to the EU Importer or related to product compliance in Europe should be sent to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-D, 1930 Zaventem, Belgium.

Inquiries to the UK Importer or related to product compliance in the UK should be sent to the manufacturer's authorized representative, Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT13 0XW, United Kingdom.

Hereby, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://compliance.sony.eu>

Hereby, Sony Corporation declares that this equipment is in compliance with the UK relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:

<https://compliance.sony.co.uk>

For this radio equipment, the following restrictions on putting into service or of requirements for authorisation of use apply in BE, BG, CZ, DK, DE, EE, IE, EL, ES, FR, HR, IT, CY, LV, LT, LU, HU, MT, NL, AT, PL, PT, RO, SI, SK, FI, SE, UK, IS, LI, NO, CH, AL, BA, MK, MD, RS, ME, XK, TR, UK (NI): 5 150 MHz – 5 350 MHz band and 5 945 MHz – 6 425 MHz band are restricted to indoor operations only.



Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbol for lead (Pb) is added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed of correctly, you will help to prevent potentially negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case the product or for some reason the data may require a permanent connection to an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be properly handled over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

Turning ON/OFF the wireless function

Turn off the wireless function by pushing the LINK of the rear speaker 5 times.

Pushing the LINK of the rear speaker 5 times again turns on the wireless function.

(The wireless function also turns on by turning on the rear speaker after the speaker is turned off.)

This unit should be installed and operated keeping the radiator at least 20 cm away from person's body.

For customers in the UK

STATEMENT OF COMPLIANCE

1. Model No.: YY2087C
2. Name and address of the manufacturer's authorised representative: Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT13 0XW, United Kingdom

3. The statement of compliance is issued under the sole responsibility of the manufacturer: Sony Corporation, 1-71 Konan Minato-ku Tokyo, 108-0075 Japan

4. Object of the statement: Rear Speaker

5. The object of the statement described above is in compliance with the applicable security requirements in Schedule 1 of S.I. 2023 No. 1007 (Product Security)

6. Where applicable, references to the relevant standards used in relation to which compliance is declared:

7. Defined support period for security updates: 2029-03-31

8. Additional information: Note(s):

Signed for and on behalf of: Sony Europe B.V.



Kris De Pauw
Vice President
Weybridge, 2024-06-17

Sony Europe B.V.
Registered Office: The Heights, Brooklands, Weybridge, Surrey, KT13 0XW, United Kingdom
Incorporated in the Netherlands No. 71682147


How To Use

Make sure you follow the instructions for installing and connecting the rear speaker in the Help Guide.
Access the Help Guide from the URL on the cover of this document.
You may need to update the software of the compatible model to connect to this rear speaker.

This rear speaker only works with specific compatible models.
Please check the latest compatible model information at the following URL:
<https://www.sony.net/comp-home/>

Mounting on a Wall

Refer to the Help Guide from the URL on the cover of this document for more details and other installation method.

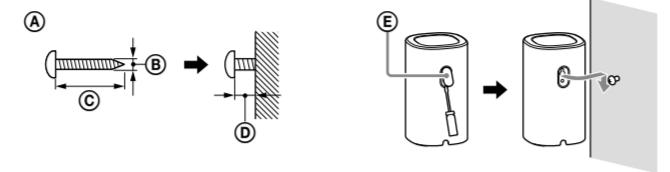

- (A) A screw (not supplied) that is suitable for the wall mounting hole on the rear of the speakers
- (B) 4 mm
- (C) More than 30 mm
- (D) Approx. 10 mm
- (E) Cover

Notes

- Ask a Sony dealer or licensed contractor to install the speakers securely and with full consideration of safety.
- Sony shall not be held responsible for any accidents or damage caused by improper installation, lack of installation stability, misuse or natural disaster.
- Prepare screws (not supplied) suitable for the wall material and hardness. Depending on the wall material, screws that are not suitable may damage the wall. Fasten the screws securely into the wall.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obliged to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
<https://rd1.sony.net/help/si/25a/>
- The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL. You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL. This offer is valid to anyone in receipt of this information.
<https://oss.sony.net/Products/Linux/>
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Precautions

- Before operating the unit, check that the operating voltage is identical to your local power supply. The operating voltage is indicated on the nameplate on the bottom of the unit.
- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- AC power cord (main lead) must be changed only at a qualified service shop.

On placement

- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
- Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.

How to care for the unit

- Any dust or dirt on the fabric part should be gently removed with a soft cloth.
- Scratching the drift off with the fingernails or applying excessive force may damage the fabric.
- Do not use cleaning brushes, etc., as such tools may damage the fabric depending on the tool material.
- If the fabric part is heavily soiled, wipe it with a soft cloth lightly dampened with a neutral detergent, then wipe it again with a soft dry cloth.
- Use of detergents or cleaners other than neutral detergent may cause color fading or fabric damage.
- Wipe the cabinet with a soft cloth dampened with a mild detergent. Do not use abrasive pads, cleansers, or solvents like alcohol or benzene.

Other notes

- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Trademarks

- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Specifications

Rear speaker (YY2087C)

Amplifier section

POWER OUTPUT (rated)
Tweeter: 8 W (at 4 Ω, 10 kHz, 1% THD)
Woofer: 32 W (at 4 Ω, 1 kHz, 1% THD)
POWER OUTPUT (reference)
Tweeter: 10 W (at 4 Ω, 10 kHz)
Woofer: 40 W (at 4 Ω, 1 kHz)

Wireless LAN section

Communication system
IEEE 802.11 a/b/g/n/ac/ax
Frequency band
2.4 GHz, 5 GHz

General

Power
220 V - 240 V AC, 50 Hz/60 Hz
Power consumption
On: 20 W
Network standby mode: 1.8 W or less
Turned off: 0.3 W or less
When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the product automatically enters the network standby mode or turned off.
Disabling the [Auto Standby] function will increase the power consumption of this product.
When this product is connected to home audio equipment, the power of the product is controlled in conjunction with the auto standby function of home audio equipment.
Dimensions (W x H x D)
Including operating parts and controls
Approx. 116 mm × 202 mm × 116 mm
Mass
Approx. 1.1 kg

Wireless transmitter/receiver section

Communication system
Wireless Sound Specification
Frequency band
5 GHz, 6 GHz

Included items


Rear speaker (REAR L) (1)
Rear speaker (REAR R) (1)
AC power cord (mains lead) (4)
Documents (1 set)

For customers in the UK, Ireland, Malta, and Cyprus:

Use AC power cord (mains lead) (A).
For safety reasons, AC power cord (mains lead) (B) is not intended for the above countries/regions and shall therefore not be used there.

For customers in other countries/regions:

Use AC power cord (mains lead) (B).

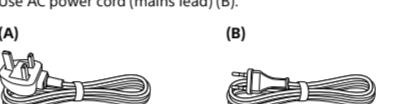

Radio frequency bands and maximum output power

	Frequency band	Maximum output power
BLUETOOTH	2 400 - 2 483.5 MHz	< 15 dBm
BLUETOOTH LOW ENERGY	2 400 - 2 483.5 MHz	< 9.9 dBm
Wireless LAN	2 400 - 2 483.5 MHz	< 19.9 dBm
	5 150 - 5 250 MHz	< 19.9 dBm
	5 250 - 5 350 MHz	< 19.9 dBm
	5 470 - 5 725 MHz	< 19.9 dBm
	5 725 - 5 850 MHz	< 13.96 dBm
Wireless Speaker	5 150 - 5 250 MHz	< 19.9 dBm
	5 250 - 5 350 MHz	< 19.9 dBm
	5 470 - 5 600 MHz	< 19.9 dBm
	5 650 - 5 725 MHz	< 19.9 dBm
	5 725 - 5 850 MHz	< 13.96 dBm
	5 945 - 6 425 MHz	< 22.9 dBm

The 6 GHz radio frequency band is unavailable in some countries or regions.

Depending on the connected device, the available radio frequency varies.

Design and specifications are subject to change without notice.

You can find the product specifications, including information about energy saving if applicable, by visiting the following link, choosing your country/region, opening the page for your product, and then going to the specifications section: sony.com/country

Précautions

- Avant d'utiliser l'appareil, assurez-vous que sa tension de fonctionnement correspond à celle du secteur. La tension de fonctionnement est indiquée sur la plaque signalétique située sur le dessous de l'appareil.
- Le cordon d'alimentation secteur fourni est conçu uniquement pour cet appareil. Il ne doit pas être utilisé en combinaison avec d'autres dispositifs.
- Débranchez le cordon d'alimentation secteur de la prise secteur si vous n'envisagez pas d'utiliser l'appareil pendant une période prolongée. Lorsque vous débranchez le cordon d'alimentation secteur, saisissez-le toujours par sa fiche. Ne tirez jamais sur le cordon lui-même.
- Le cordon d'alimentation secteur ne doit être remplacé que dans un centre de service après-vente qualifié.

Installation

- Ne placez pas l'appareil à proximité d'une source de chaleur ou dans un endroit exposé aux rayons du soleil, à une poussière excessive ou à des chocs mécaniques.
- Placez cet appareil sur une surface plane et horizontale. Lorsqu'il est placé sur une surface inclinée, l'appareil peut se renverser ou tomber en raison de ses propres vibrations, et entraîner des blessures, des dysfonctionnements ou une dégradation des performances.
- Soyez vigilant lorsque vous placez l'appareil sur une surface qui a subi un traitement spécial (avec de la cire, de l'huile, du polish, etc.), car cela risque de tacher ou de décolorer la surface.
- Les enceintes de cet appareil ne comportent aucun blindage magnétique. Ne posez pas de cartes magnétiques sur l'appareil ou à proximité de celui-ci.
- Ne placez aucun objet métallique autre qu'un téléviseur à proximité de l'appareil. Les fonctions sans fil peuvent être instables.

Entretien de l'appareil

- Tout la poussière ou les salissures présentes sur le tissu doivent être retirées délicatement à l'aide d'un chiffon doux.
- Grattez les salissures avec l'ongle ou exercer une pression trop forte sur le tissu risque de l'endommager.
- Ne utilisez pas de brosse de nettoyage, etc., car selon le matériau dans lequel ce type d'ustensile est fabriqué, il peut endommager le tissu.
- Si la partie en tissu est particulièrement sale, essuyez-la à l'aide d'un chiffon doux légèrement humidifié avec un détergent neutre, puis essuyez-la à nouveau à l'aide d'un chiffon doux et sec. L'utilisation de détergents ou de nettoyeurs autres que neutres peut entraîner une décoloration du tissu ou l'endommager.
- Essuyez le boîtier avec un chiffon doux humidifié avec un détergent doux. N'utilisez pas de tampon abrasif, ni de nettoyant ni de solvant, notamment de l'alcool ou du benzène.

Autres remarques

- Si un objet ou un liquide pénètre dans l'appareil, débranchez-le et faites-le vérifier par un technicien qualifié avant de continuer à l'utiliser.
- Pour toute question ou tout problème concernant cet appareil n'apparaissant pas dans ce manuel, consultez votre revendeur Sony le plus proche.

Marques

- La marque et les logos BLUETOOTH® sont des marques commerciales déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par Sony Group Corporation et ses filiales est sous licence.
- Toutes les autres marques et marques déposées sont des marques ou des marques déposées de leurs détenteurs respectifs. Les symboles™ et ® n'apparaissent pas dans ce manuel.

Spécifications

Enceinte arrière (YY2087C)

Section amplificateur

PUISANCE DE SORTIE (nominale)

Tweeter : 8 W (à 4 Q, 10 kHz, 1% DHT)

Woofer : 32 W (à 4 Q, 1 kHz, 1% DHT)

PUISANCE DE SORTIE (référence)

Tweeter : 10 W (à 4 Q, 10 kHz)

Woofer : 40 W (à 4 Q, 1 kHz)

Section LAN sans fil

Système de communication

IEEE 802.11 a/b/g/n/ac/ax

Bande de fréquences

2,4 GHz, 5 GHz

Général

Alimentation

220 V - 240 V CA, 50 Hz/60 Hz

Consommation électrique

En fonctionnement : 20 W

Mode veille en réseau : 1,8 W ou moins

Mise hors tension : 0,3 W ou moins

Lorsque la fonction [Mise en veille automatique] est activée, si le produit n'est pas utilisé et qu'aucune entrée de signal n'est enregistrée pendant 20 minutes environ, le produit entre automatiquement en mode veille et ce n'est pas mis hors tension.

La désactivation de la fonction [Mise en veille automatique] augmentera la consommation électrique de ce produit.

Lorsque le produit est connecté à un équipement audio domestique, l'alimentation du produit est commandée par la fonction de mise en veille automatique de l'équipement audio domestique.

Dimensions (l x h x p)

Parties saillantes et commandes comprises

Env. 116 mm × 202 mm × 116 mm

Poids

Env. 1,1 kg

Section émetteur/récepteur sans fil

Système de communication

Spécifications du son sans fil

Bande de fréquences

5 GHz, 6 GHz

Éléments fournis

Enceinte arrière (Arrière gauche) (1)

Enceinte arrière (Arrière droite) (1)

Cordon d'alimentation secteur (4)

Documents (1 jeu)

Pour les clients au Royaume-Uni, en Irlande, à Malte et à Chypre :

Utilisez un cordon d'alimentation CA (cordon secteur) (A).

Pour des raisons de sécurité, le cordon d'alimentation CA (cordon secteur) (B) n'est pas destiné aux pays/régions ci-dessus et ne doit donc pas y être utilisé.

Pour les clients d'autres pays/régions :

Utilisez un cordon d'alimentation CA (cordon secteur) (B).

(A)



(B)



Gammes de fréquences radio et puissance de sortie maximum

	Bande de fréquences	Puissance de sortie maximale
BLUETOOTH	2 400 - 2 483,5 MHz	< 15 dBm
BLUETOOTH LOW ENERGY	2 400 - 2 483,5 MHz	< 9,9 dBm
LAN sans fil	2 400 - 2 483,5 MHz	< 19,9 dBm
	5 150 - 5 250 MHz	< 19,9 dBm
	5 250 - 5 350 MHz	< 19,9 dBm
	5 470 - 5 725 MHz	< 19,9 dBm
	5 725 - 5 850 MHz	< 13,96 dBm
Enceinte sans fil	5 150 - 5 250 MHz	< 19,9 dBm
	5 250 - 5 350 MHz	< 19,9 dBm
	5 470 - 5 600 MHz	< 19,9 dBm
	5 650 - 5 725 MHz	< 19,9 dBm
	5 725 - 5 850 MHz	< 13,96 dBm
	5 945 - 6 425 MHz	< 22,9 dBm

La bande de fréquences radio de 6 GHz n'est pas disponible dans certains pays ni certaines régions.

La fréquence radio disponible varie en fonction du dispositif connecté.

La conception et les spécifications peuvent être modifiées sans avis préalable.

Pour accéder aux caractéristiques techniques du produit, y compris, le cas échéant, aux informations relatives aux économies d'énergie, utilisez le lien suivant, choisissez votre pays/région, ouvrez la page dédiée à votre produit et accédez à la section des caractéristiques techniques : sony.com/country

Español

Altavoz trasero

Antes de usar la unidad, acceda a la siguiente URL y lea el contrato de licencia de usuario final (CLUF). https://rd1.sony.net/help/vs/el22_h_22/

Modelo: YY2087C

El término "producto" en este documento se refiere a la unidad o sus accesorios.

Para clientes de Europa

No instale el producto en un espacio reducido, como una estantería o un armario empotrado.

Para reducir el riesgo de incendio, no cubra la abertura de ventilación de la unidad con periódicos, paños de cocina, cortinas, etc. No exponga la unidad a fuentes de llama viva (por ejemplo, velas encendidas).

Para reducir el riesgo de incendio o descarga eléctrica, no exponga este producto a goteos o salpicaduras, ni coloque objetos llenos de líquido, como floreros, encima del producto.

La unidad no se desconecta de la fuente de alimentación de CA (red eléctrica) siempre que esté conectada a la toma de pared, aunque se haya apagado la propia unidad.

Instale la unidad de manera que el cable de alimentación pueda desenchufarse de la toma de corriente de la red rápidamente si se produce algún problema.

Este producto tiene un imán (o imanes) que puede interferir con marcapasos, válvulas de derivación programables para el tratamiento de la hidrocefalia, o con otros aparatos médicos. No ponga el producto cerca de personas que utilizan dichos aparatos médicos. Consulte con su médico antes de utilizar este producto si utiliza cualquiera de dichos aparatos médicos.

Encontrará la placa de identificación e información importante sobre seguridad en:

• La parte inferior de la unidad

Para obtener más información acerca de los efectos del contacto con el cuerpo humano del teléfono móvil o de otros dispositivos inalámbricos conectados a la unidad, consulte el manual de instrucciones del dispositivo inalámbrico.

La validez de la marca CE está restringida solo a aquellos países o regiones en los que se exige legalmente, principalmente en los países o regiones del EEE (Espacio Económico Europeo) y Suiza. La validez de la marca UKCA está restringida solo a aquellos países o regiones en los que se exige legalmente, principalmente en Reino Unido.

Aviso para los clientes: la siguiente información se aplica únicamente a los productos vendidos en países o regiones donde se aplican las directivas de la UE.

Este producto ha sido fabricado por, o en nombre de Sony Corporation.

Importador UE: Sony Europe B.V.

Las consultas relacionadas con el importador a la UE o con la conformidad del producto en Europa deben dirigirse al representante autorizado por el fabricante, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-DT, 1930 Zaventem, Bélgica.

Por la presente, Sony Corporation declara que este equipo es conforme con la Directiva 2014/53/UE. El texto completo de la declaración de UE de conformidad está disponible en la dirección de Internet siguiente: <https://compliance.sony.eu>

Para este equipo de radio, se aplican las siguientes restricciones sobre la puesta en marcha o los requisitos de autorización de uso de BE, BG, CZ, DK, DE, EE, IE, ES, FR, HR, IT, CY, LV, LT, LU, HU, MT, NL, AT, PL, PT, RO, SI, SK, FI, SE, UK, IS, LI, NO, CH, AL, BA, MK, MD, RS, ME, XK, TR, UK (NI):

La banda 5 150 MHz – 5 350 MHz y la banda 5 945 MHz – 6 425 MHz están restringidas únicamente al uso en interiores.



Tratamiento de las baterías y equipos eléctricos y electrónicos al final de su vida útil (aplicable en la Unión Europea y otros países con sistemas de tratamiento selectivo de residuos)

Este símbolo en el producto, la batería o el embalaje indica que el producto y la batería no pueden tratarse como un residuo doméstico normal. En algunas baterías este símbolo puede utilizarse en combinación con un símbolo químico. Se añadirá el símbolo químico del plomo (Pb) si la batería contiene más del 0,004% de plomo. Al asegurarse de que estos productos y baterías se desechan correctamente, ayudará a prevenir las posibles consecuencias negativas para la salud y el medio ambiente derivadas de la incorrecta eliminación.

El resumen de las normas de tratamiento de residuos de la Unión Europea establece la obligación de preservar los recursos naturales. En el caso de productos, que por razones de seguridad, rendimiento o mantenimiento de datos, requieren una conexión permanente con la batería incorporada, esta batería deberá reemplazarse únicamente por personal técnico cualificado para ello. Para asegurarse de que la batería se desechará correctamente, entregue estos productos al final de su vida útil en un punto de recogida adecuado para el reciclado de aparatos eléctricos y electrónicos. Para el resto de baterías, consulte la sección donde se indica cómo extraer la batería del producto de forma segura. Deposite la batería en el correspondiente punto de recogida para el reciclado de baterías. Si desea obtener información detallada sobre el reciclaje de este producto o de la batería, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto o la batería.

Activación/desactivación de la función inalámbrica

Puede desactivar la función inalámbrica pulsando LINK en el altavoz trasero 5 veces.

Si pulsa de nuevo 5 veces LINK en el altavoz trasero se activará la función inalámbrica.

(La función inalámbrica también se activa al activar el altavoz trasero después de desactivarlo.)

Esta unidad debe instalarse y utilizarse manteniendo el emisor de ondas separado, al menos, 20 cm del cuerpo de la persona.


Instrucciones de uso

Siga las instrucciones para instalar y conectar el altavoz trasero indicadas en la Guía de ayuda.
Acceda a la Guía de ayuda desde la URL de la portada de este documento.
Tal vez tenga que actualizar el software del modelo compatible para conectar este altavoz trasero.

Este altavoz trasero solo funciona con modelos compatibles concretos. Consulte la información más reciente sobre los modelos compatibles en la siguiente URL: <https://www.sony.net/comp/home/>

Montaje en una pared

Consulte la Guía de ayuda de la URL de la portada de este documento para obtener más información y ver otros métodos de instalación.

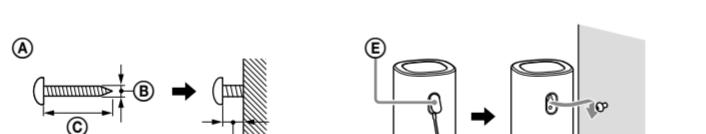

① Un tornillo (no incluido) apto para el orificio de montaje en pared de la parte trasera de los altavoces