

ROTEL®

RAP-1580MKII Amplifier Configuration Options

October 2020

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 5.1
FRONT (SPEAKER OUT)	: Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: None
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: None
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use internal amplifiers only

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 7.1
FRONT (SPEAKER OUT)	: Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Center Back L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: None
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use internal amplifiers only

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 5.1 Front Bi-Amp
FRONT (SPEAKER OUT)	: Front L/R (High Frequency)
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Front L/R (Low Frequency)
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: None
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use internal amplifiers with Bi-Amp of front channels

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 5.1.2
FRONT (SPEAKER OUT)	: Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Overhead L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: None
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use internal amplifiers only

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 7.1.4
FRONT (SPEAKER OUT)	: Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Center Back L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Overhead Front L/R
HEIGHT 2 (PREOUT)	: Overhead Rear L/R
CONFIRM	
CANCEL	

Use external amplifiers for overhead speakers

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 7.1.2
FRONT (SPEAKER OUT)	: Front L/R
CENTER (SPEAKER OUT)	: Center Speaker
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Center Back L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Overhead L/R External Amp
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use external amplifiers for overhead speakers

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 5.1.4
FRONT (SPEAKER OUT)	: Overhead L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: None
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Overhead Front L/R
HEIGHT 2 (PREOUT)	: Overhead Rear L/R
CONFIRM	
CANCEL	

Use external amplifiers for front speakers

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 7.1.2 Extern Front Amp
FRONT (SPEAKER OUT)	: Overhead L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Center Back L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Front L/R (External Amp)
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use external amplifiers for front speakers

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 7.1.4 Extern Front&Sur Amps
FRONT (SPEAKER OUT)	: Overhead Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Overhead Rear L/R
CENTER BACK (SPEAKER OUT)	: Center Back L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Front L/R (External Amp)
HEIGHT 2 (PREOUT)	: Surround L/R (External Amp)
CONFIRM	
CANCEL	

Use external amplifiers for front and surround speakers

AUDIO CONFIGURATION	
AMPLIFIER SETUP	: 5.1.4 Extern Front Amp
FRONT (SPEAKER OUT)	: Overhead Front L/R
CENTER (SPEAKER OUT)	: Center
SURROUND (SPEAKER OUT)	: Surround L/R
CENTER BACK (SPEAKER OUT)	: Overhead Rear L/R
SUBWOOFER (PREOUT)	: Subwoofer
HEIGHT 1 (PREOUT)	: Front L/R (External Amp)
HEIGHT 2 (PREOUT)	: None
CONFIRM	
CANCEL	

Use external amplifiers for front speakers