



# GX Series

FRONT & STAND (UNIT: mm)	55"	65"	77"	Remark
<b>A</b> (Set Width : W)	1225	1446	1721	W/O Stand
<b>B1</b> (Head Speaker Part Depth : D)	23.1	19.9	24.1	
<b>C1</b> (Head height, Including protrusion: H)	705	829	991	
<b>D</b> (Depth, Including Stand)	270.8	282.8	323	With Stand
<b>E</b> (Height, Including Stand)	765	892	1050	
<b>B2</b> (Head, thickest depth : Wall mount surf.)	23.1	19.9	24.1	
<b>B3</b> (Head, slimmest depth)	6.5	6.5	7.8	
<b>C2</b> (Head height, Excluding protrusion)	700	824	985	
<b>F</b> (Cabinet, inside horizontal length)	1222	1443	1718	
<b>G</b> (Cabinet, inside vertical length)	697	821	982	
<b>H</b> (Stand, horizontal outer length)	1168	1371	1623	
<b>J</b> (Head, front surf. ↔ Stand, front end)	109	123	156	
<b>K</b> (Cabinet, inside diagonal length)	1405	1659	1977	
<b>M1</b> (Set, L/R Off Bezel)	2.0	2.0	2.0	
<b>M2</b> (Set, L/R On Bezel)	7.9	8.9	11.7	
<b>N1</b> (Set, Top Off Bezel)	2.0	2.0	2.0	
<b>N2</b> (Set, Top On Bezel)	7.7	8.7	13.2	
<b>P1</b> (Set, Bottom Off Bezel)	2.0	2.0	2.0	
<b>P2</b> (Set, Bottom On Bezel)	11.6	11.6	17.2	
<b>Q</b> (Bottom On Bezel, Including protrusion)	17	17	6	
<b>R</b> (Module Center ↔ Stand bottom)	415	480	558	

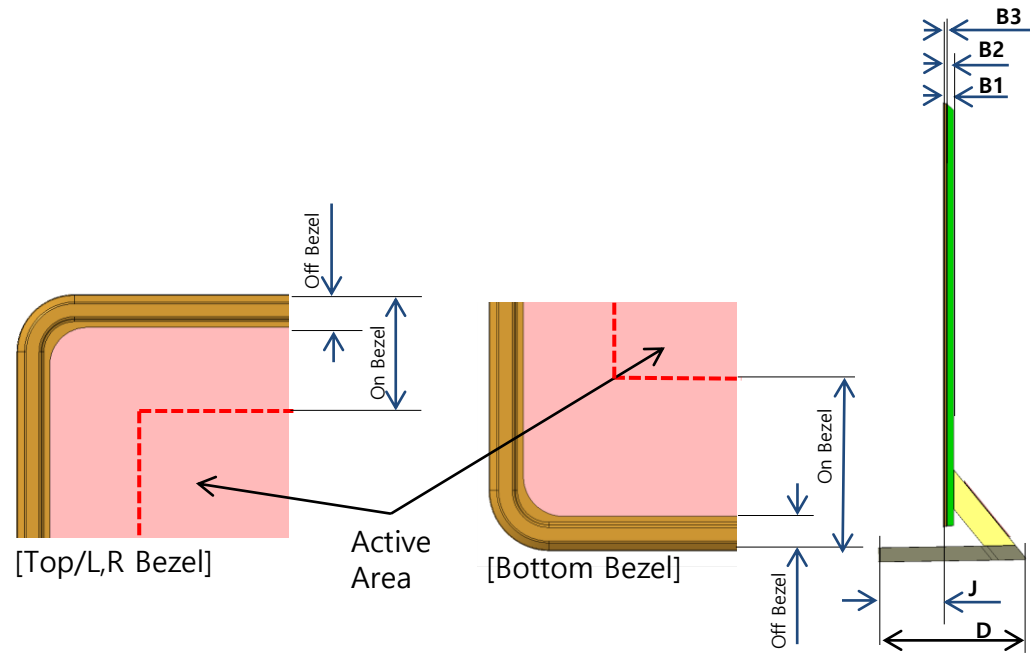

<b>BACK (UNIT: mm)</b>	<b>55"</b>	<b>65"</b>	<b>77"</b>
<b>T1</b> (Set Out ↔ Wall mount hole)	463	573	710
<b>U1</b> (Wall mount Top Width)	300	300	300
<b>V1</b> (Wall mount Height)	300	300	300
<b>W1</b> (Set Top ↔ Wall mount hole)	221	309	321
<b>X1</b> (Set Bottom ↔Wall mount hole)	179	215	364
<b>X2</b> (Set Max Bottom ↔Wall mount hole)	184	221	407
<b>T2</b> (Set Out ↔ Wall mount hole)	523	633	770
<b>U2</b> (Wall mount Top Width)	180	180	180
<b>W2</b> (Set Top ↔ Wall mount hole)	133	137	168
<b>X3</b> (Set Bottom ↔Wall mount hole)	567	687	817
<b>X4</b> (Set Max Bottom ↔Wall mount hole)	572	693	824
<b>AA</b> (VESA Pemnut, Screw tap depth)	7.0	7.0	7.0
<b>BB</b> (VESA Pemnut, Screw tap depth, including B/C Thickness)	13.6	13.9	14.3

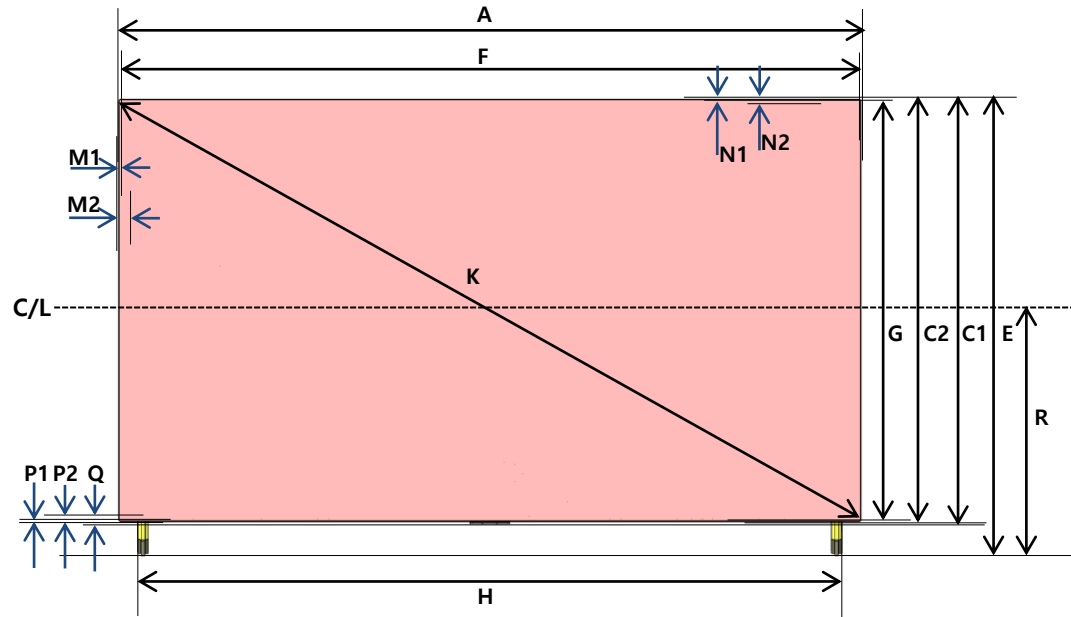